


# KRX1000 Tree Kickers V1 & V2

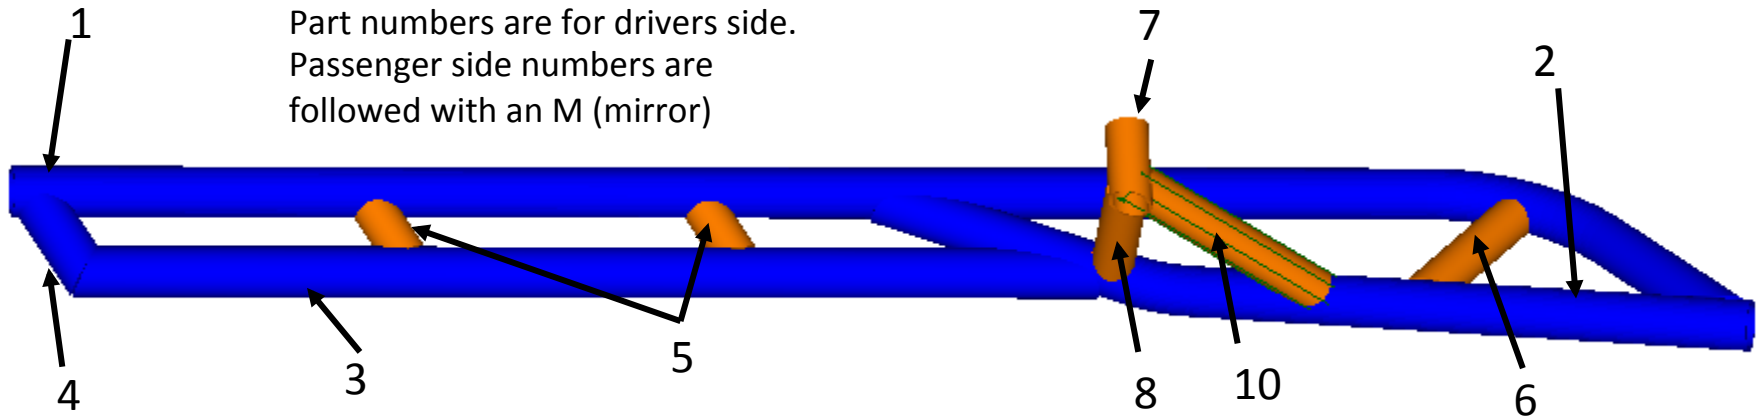

Version 1 will not contain Parts 3 thru 5

As with any KRX sliders the lower plastics will need to be removed and clearance for the mounts made. We start with 1.50" hole saw and then use a die grinder to open up the lower part for the tabs if necessary. We find it easier to trim from the inside of the panel.

We start assembly by welding the weld washer to the flat side of 7, this is your upper mounting location. End caps go on the flat cut ends of 1 and 2. Parts 1-6 can be assembled off the vehicle if desired. Slot and tabs should locate 1 & 2 together.

Bolt the tabs to the vehicle in the proper location and place the assembly on the vehicle and fit parts 7-10 (NO PART 9) to the assembly. Once it all fits, tack tabs in place and remove from vehicle for final welding. Enjoy!